




Hanging instructions – Acrylic coated wallpaper

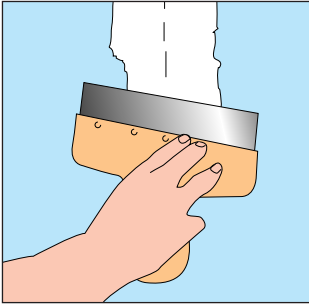


1. Before you hang the wallpaper, make sure the surface is even. Tear off any loose pieces. Fill uneven parts and wallpaper joints with filler.

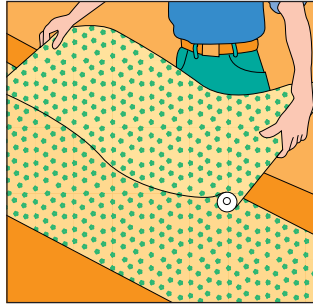


2. Unroll two rolls side by side to see how the pattern matches. Ensure that they are without any visible defects.

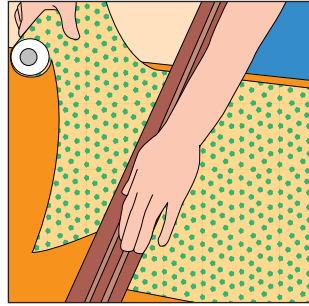


3. Cut the length with a few centimeters to spare. The outer part of the roll must be towards the floor.

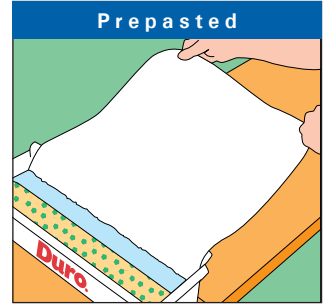


4. Fill the trough with water. Add a few drops of detergent to the water. Always keep it filled. Press the rolled-up length into the water. Take hold of the short end of the length and pull. Make sure that water covers the entire rear surface of the wallpaper.

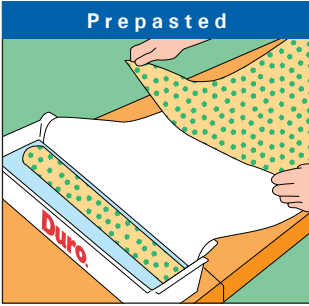

5. When you have pulled it out to about half of its length, fold it over, patterned side outwards. Pull out the rest and fold it in the same manner. Let it soak for about five minutes before you hang it up.

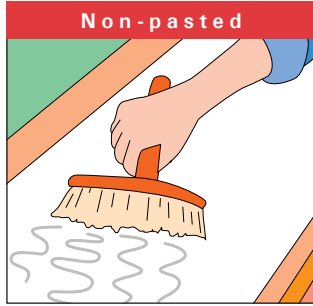

(4.) Apply paste with a brush or a roller. Make sure that the paste is spread all over the surface.

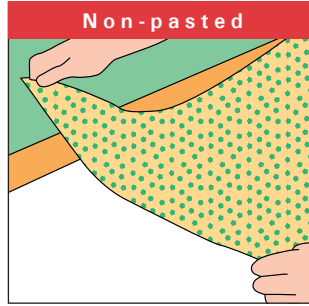


(5.) Fold both ends carefully to meet in the middle with pasteside inwards. Make sure that the edges are aligned. Leave it to soak for a few minutes (see the label).




6. Start wallpapering by a window. Cover approximately half the room up to a door or a corner on the opposite wall. Then start again by the window, and cover rest of the room. When you get to a light-switch or a power socket, turn off the electricity at the mains and remove the protective cover.




7. Attach the length high enough up the wall so that a piece of the length is above the line where you intend to trim.

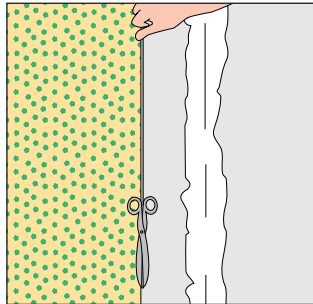


8. Use a length of string attached to something heavy such as a pair of scissors to check that the length really is hanging straight.

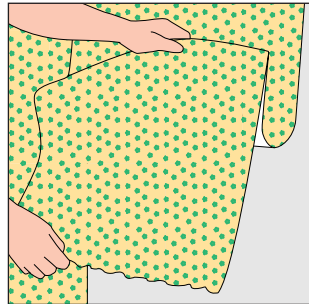


9. Unfold the lower half. Brush out any bubbles with a sponge or a brush. Work from the middle towards the edges, and from the ceiling towards the floor.

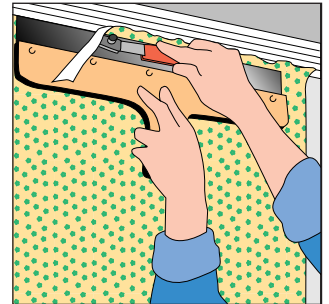


10. Trim the section near the ceiling. Use the large spatula as a support.

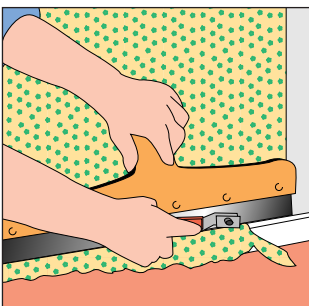


11. Trim the section near the floor. Use the large spatula as a guide. Change the blade often, a dull blade will tear the wallpaper.

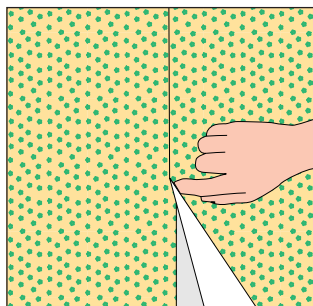

12. Butt joint lengths (do not overlap).

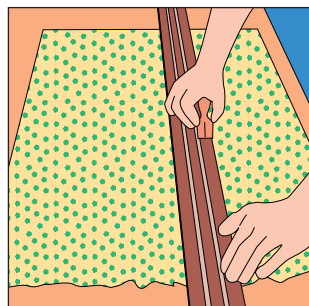

13. When you get to a corner, wet or glue, and fold the length as usual. Make sure the sides are truly aligned. Divide the length lengthwise so that the first section goes around the corner with about a two centimeter overhang. Use a cutting block and a cutting ruler.

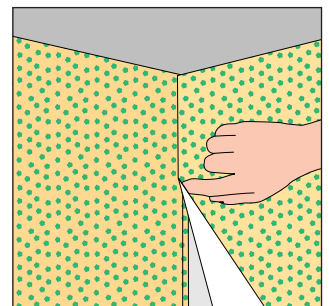

14. Make sure the first length goes all the way into the corner. Hang the second part with a bit of overlap. Use your string and scissors to ensure that the length hangs true, even if the patterns do not match up perfectly.

Do you have everything you need?

- Paste
- Roller and/or brush
- Razor knife
- Plumb line
- Folding rule
- Ruler or spatula
- Metal ruler with double cutter
- Sponge/brush
- Wallpaper board

Duro.

Duro Sweden AB, Box 907, 801 32 Gävle

www.durosverige.se

headoffice@durosverige.se